



CODOLI DI AGGANCIAMENTO PER LA LAVORAZIONE DEL LEGNO

PULL STUDS FOR WOODWORKING MACHINE CHUCKS

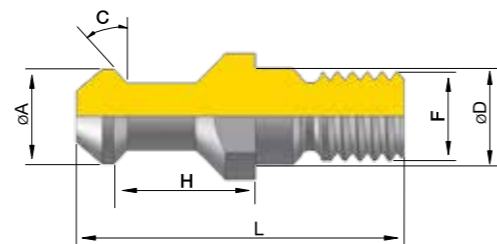

SENZA FORO
WITHOUT BORE

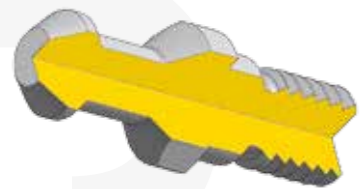


ALBERTI

SENZA FORO

Cod.	F	C	$\varnothing D$	$\varnothing A$	H	L	TOOL SHANK
CD06002	M6	45°	6,5	7	9,5	23	BT20
PS.WD25-ALB	M8	45°	9	10	13,5	31	BT25



Cod.	F	C	$\varnothing D$	$\varnothing A$	H	L	TOOL SHANK
PS.WD30-ALB	M12	45°	13	12,8	19	44	BT30

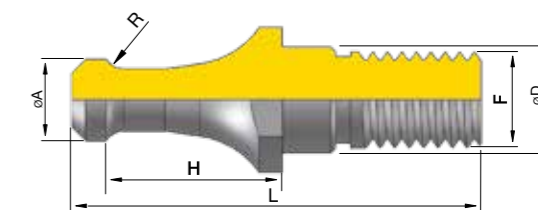

SCM

SENZA FORO



Cod.	F	R	$\varnothing D$	$\varnothing A$	H	L	TOOL SHANK
PS.WD30-SCM	M10	2,3	11	8,5	18,3	42,5	BT30

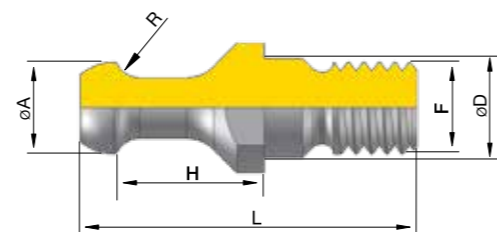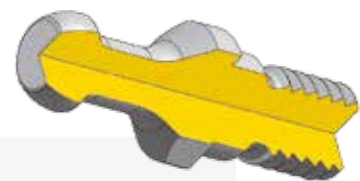

BIESSE

SENZA FORO



Cod.	F	R	$\varnothing D$	$\varnothing A$	H	L	TOOL SHANK
PS.WD30-BS2	M12	3,2	13	12	24	44	BT30

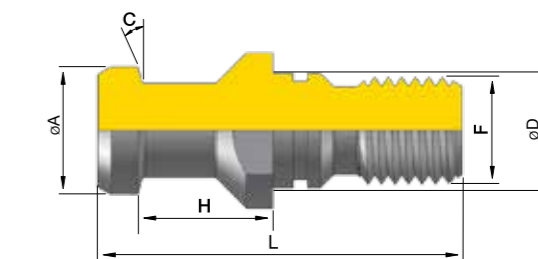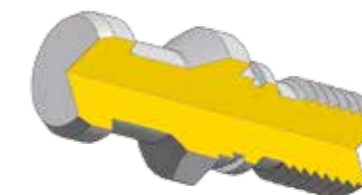

DIN 69872

SENZA FORO

Cod.	F	C	$\varnothing D$	$\varnothing A$	H	L	TOOL SHANK
PS.DIN30SF	M12	15°	13	13	19	44	BT30

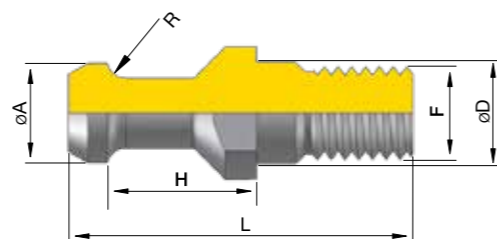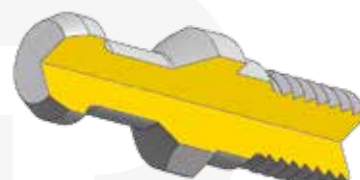

CMS

SENZA FORO

Cod.	F	R	$\varnothing D$	$\varnothing A$	H	L	TOOL SHANK
PS.WD30-CMS	M12	2,4	13	12,8	19	44	BT30